


# Harriston

*When Quality Counts*



## **SPEED CLEAN OPERATORS MANUAL**

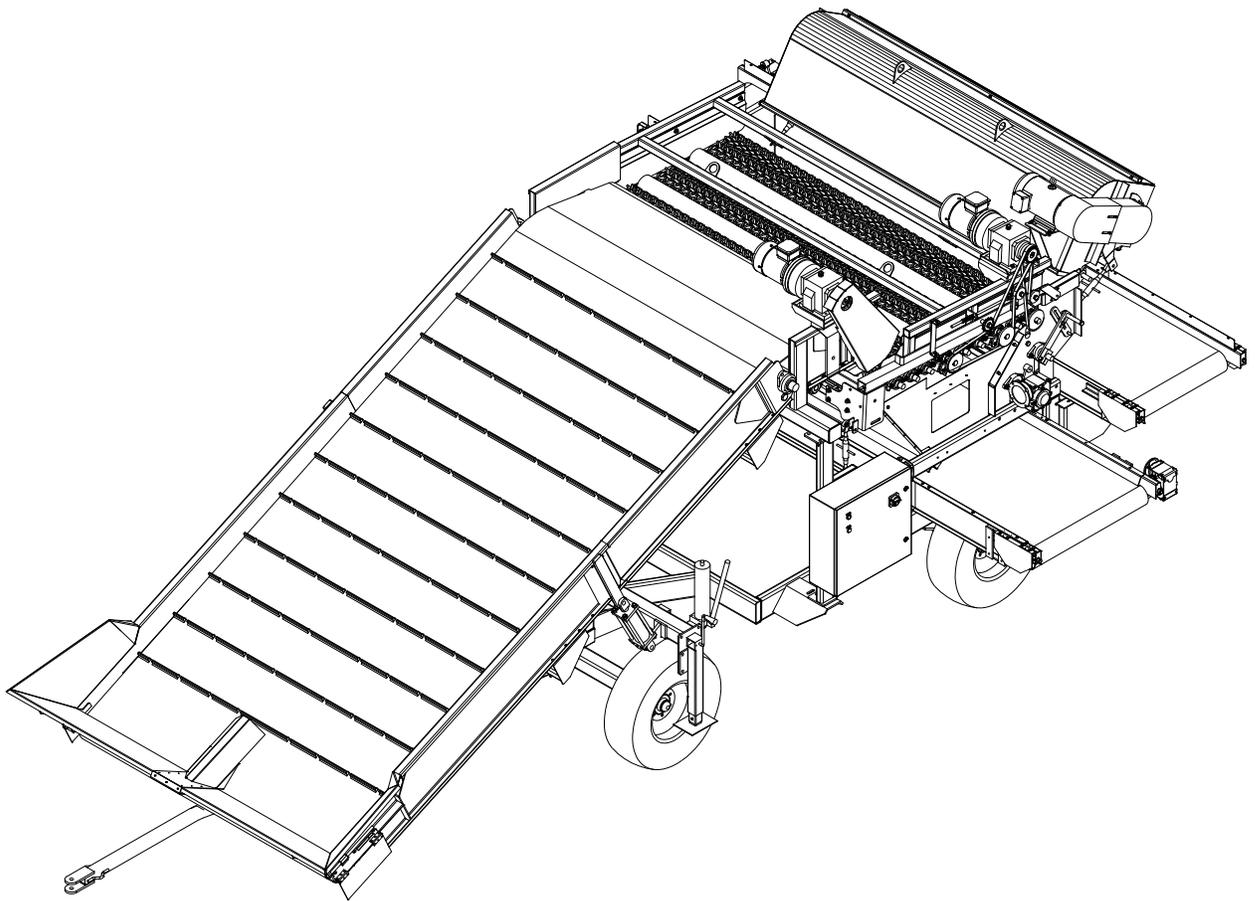

# **HARRISTON INDUSTRIES, INC. SPEED CLEAN**

## **WARRANTY**

HARRISTON INDUSTRIES, INC. (Harriston) warrants the Harriston Speed Clean to be free from defects in material and workmanship, under normal use and service. Obligation under this warranty shall extend for period of 1 year (12 months) following the date of delivery to the original purchaser and shall be limited to, at the option of Harriston, replacement or repair of any parts found, upon inspection by Harriston, to be defective.

## **WARRANTY CLAIMS**

The purchaser claiming under this warranty shall submit a warranty claim to Harriston or an authorized dealer, for inspection by an authorized company representative. Should any part prove defective within one year from date of purchase, the part will be replaced without charge, provided the defective part is returned to us, transportation charges prepaid.

## **LIMITATIONS OF LIABILITY**

This warranty is expressly in lieu of all other warranties expressed or implied and all other obligations or liabilities on our part of any kind or character, including liabilities for alleged representations or negligence. We neither assume nor authorize any other person to assume on our behalf, any liability in connection with the subsequent sale of the Speed Clean.

This warranty does not cover parts and accessories, which are under separate guarantees from the manufacturers and service facilities in Canada or the United States.

This warranty shall not apply to any Speed Clean which has been altered outside the factory in any way so as, in the judgment of Harriston, to affect its operation or reliability, or which has been subject to misuse, neglect, or accident.

No warranty is extended to regular service items such as lubricants, paint, and the like.

## **OPERATOR'S MANUAL**

The Purchaser acknowledges having received training in the safe operation of the Speed Clean and further acknowledges that Harriston does not assume any liability resulting from the operation of the Speed Clean in any manner than described in the Operator's Manual supplied at the time of purchase.

## **WARRANTY VOID IF NOT REGISTERED**

# TABLE OF CONTENTS


1	INTRODUCTION.....	1
2	SAFETY .....	2
3	SAFETY DECAL LOCATIONS.....	8
4	OPERATION.....	11
5	TRANSPORTING.....	20
6	SERVICE AND MAINTENANCE .....	23
7	TROUBLESHOOTING .....	28
8	UNLOADING AND ASSEMBLY .....	29
9	SPECIFICATIONS .....	30
10	INDEX.....	34

# SERIAL NUMBER LOCATION

Always give your dealer the serial number of your Harriston Potato Speed Clean when ordering parts or requesting service or other information.

The serial number plates are located where indicated. Please mark the number in the space provided for easy reference.

## Serial Number \_\_\_\_\_

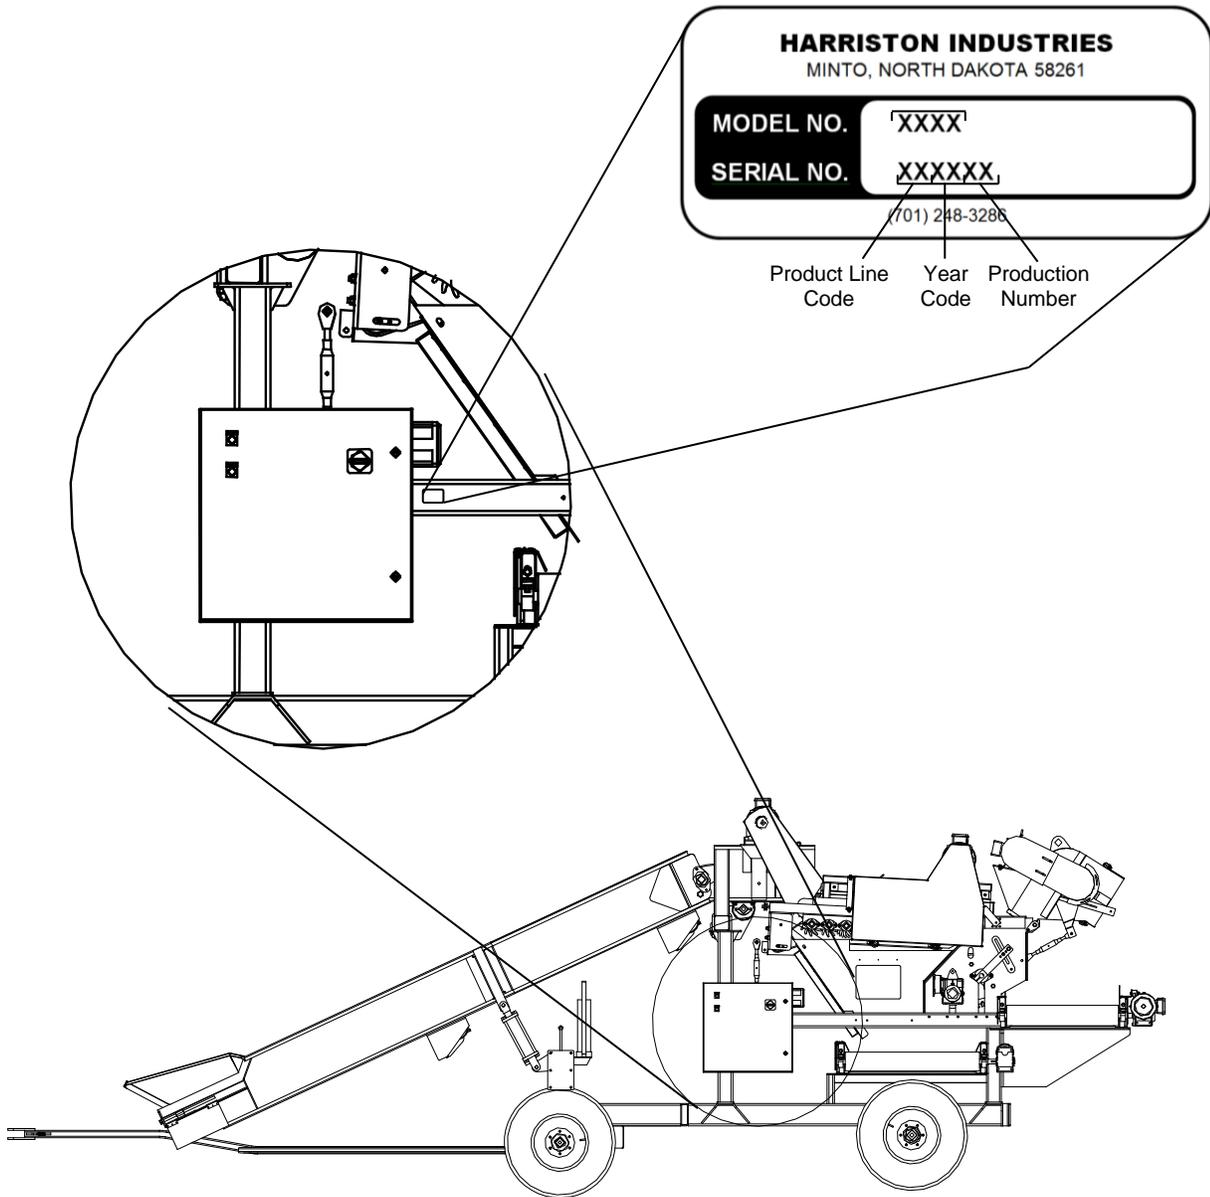


# 1 INTRODUCTION

Congratulations on your choice of a Harriston Speed Clean to complement your farming operation. This equipment has been designed and manufactured to meet the needs of a discerning potato industry for the efficient handling of potatoes.

Safe, efficient, and trouble-free operation of your Harriston Speed Clean requires that you and anyone else who will be operating or maintaining the Speed Clean read and understand all of the safety, operation, maintenance, and trouble shooting information contained in this Operator's Manual.

Keep this manual handy for frequent reference and to pass on to new operators and owners. Call your Harriston dealer or distributor if you need assistance, information, or additional copies of the manual.

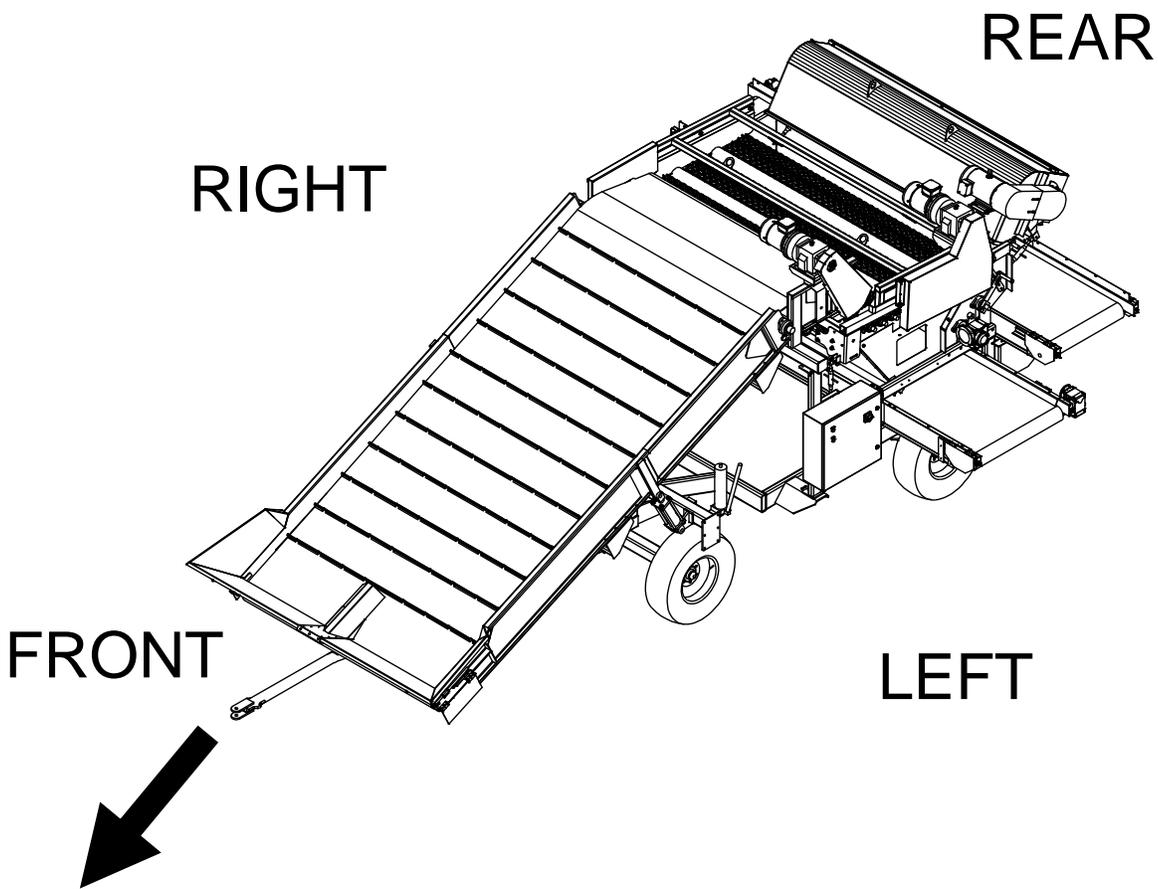


**Operator Orientation** - The directions left, right, front and rear, as mentioned throughout the manual, are as seen from the driver's seat and facing in the direction of travel.

## 2 SAFETY

### SAFETY ALERT SYMBOL

This Safety Alert symbol means **ATTENTION!**  
**BECOME ALERT! YOUR SAFETY IS INVOLVED!**

and in the manual. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.

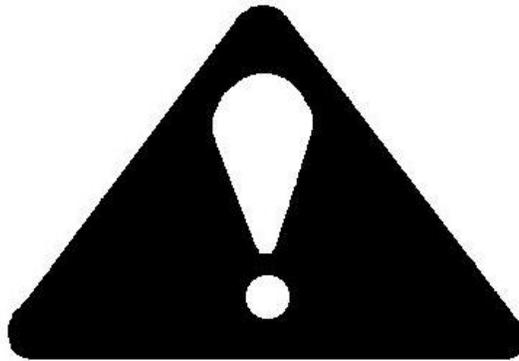

Why is safety important to you?

### 3 Big Reasons

#### SIGNAL WORDS:

Note the use of the signal words **DANGER**, **WARNING**, AND **CAUTION** with the safety messages. The appropriate signal word for each message has been selected using the following guidelines:

**Accidents Disable and Kill**  
**Accidents Cost**  
**Accidents Can Be Avoided**

**DANGER** - An immediate and specific hazard that **WILL** result in severe personal injury or death if the proper precautions are not taken.

**WARNING** – A specific hazard or unsafe practice that **COULD** result in severe personal injury or death if proper precautions are not taken.

**CAUTION** – Unsafe practices which could result in personal injury if proper practices are not taken, or as a reminder of good safety practices.

The Safety Alert symbol identifies important safety messages on the Harriston Speed Clean

## SAFETY

**YOU** are responsible for the SAFE operation and maintenance of your Harriston Speed Clean **YOU** must ensure that you and anyone else who is going to operate, maintain, or work around the Speed Clean be familiar with the operating and maintenance procedures and related SAFETY information contained in this manual. This manual will take you step-by-step through your working day and alerts you to all good safety practices that should be adhered to while operating the Speed Clean.

Remember, **YOU** are the key to safety. Good safety practices not only protect you but also the people around you. Make these practices a working part of your safety program. Be certain that **EVERYONE** operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk injury by ignoring good safety practices.

Speed Clean owners must give operating instructions to operators or employees before allowing them to operate the Speed Clean, and at least annually thereafter per OSHA (Occupational Safety and Health Administration) regulation 1928.57.

The most important safety device on this equipment is a SAFE operator. It is the operator's responsibility to read and understand ALL safety and operating instructions in the manual and to follow them. All accidents can be avoided.

A person who has not read and understood all operating and safety instructions is not qualified to operate the machine. An untrained operator exposes himself and bystanders to possible serious injury or death.

Do not modify the equipment in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the equipment.

Think SAFETY! Work SAFELY!

### **NOTE**


**Have your local electrician inspect the wiring to insure that it meets state and local codes.**

## GENERAL SAFETY

1. Read and understand the Operator's Manual and all safety signs before operating, maintaining, or adjusting the Speed Clean.



2. Provide a first-aid kit for use in case of an accident. Store in a highly visible place.

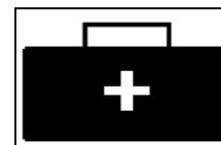

3. Provide a fire extinguisher for use in case of an accident. Store in a highly visible place.



4. Wear appropriate protective gear. This list includes, but is not limited to:


- A hard hat
- Protective shoes with slip-resistant soles
- Protective glasses or goggles
- Heavy gloves
- Wet weather gear
- Hearing protection
- Respirator or filter mask



5. Install and secure all guards before starting.

6. Do not allow riders.

7. Wear suitable ear protection for prolonged exposure to excessive noise.

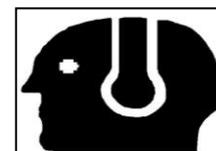

8. Stop machine, disconnect power lines, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.

9. Use a certified electrician to provide power to the machine and to service electrical components. Clear the area of people, especially small children, before starting the unit.

10. Review safety related items annually with all personnel who will be operating or maintaining the Speed Clean.

## OPERATING SAFETY

1. Read and understand the Operator's Manual and all safety signs before operating, servicing, adjusting, repairing, or unplugging.
2. Do not allow riders.
3. Install and secure all guards and shields before starting or operating.
4. Keep hands, feet, hair, and clothing away from moving parts.
5. Stop Speed Clean and disconnect power supply, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
6. Use certified electrician to provide power to the machine and to service electrical components
7. Do not operate when any guards are damaged or removed.
8. Clear the area of bystanders, especially small children, before starting.
9. Keep all hydraulic lines, fittings, and couplers tight and free of leaks before using.
10. Clean Reflectors, Slow Moving Vehicle, and lights before transporting.
11. Add extra lights and use pilot vehicle when transporting during times of limited visibility.
12. Use hazard flashers on vehicle when transporting.
13. Install safety chain when attaching to towing vehicle.
14. Follow chemical manufacturers' handling and safety instructions exactly when using chemicals with machine.
15. Review safety instructions with all operators annually.


## MAINTENANCE SAFETY

1. Follow all the operating, maintenance, and safety information in the manual.
2. Support the machine with blocks or safety stands when changing tires or working beneath it.
3. Stop Speed Clean and disconnect power supply, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
4. Make sure all guards are in place and properly secured when maintenance work is completed.
5. Never wear ill-fitting, baggy, or frayed clothing when working around or on any of the drive system components.
6. Before applying pressure to a hydraulic system, make sure all lines, fittings, and couplers are tight and in good condition.
7. Wear appropriate protective gear when contacting chemical handling components on machine.
8. Keep hands, feet, hair, and clothing away from moving or rotating parts.
9. Clear the area of bystanders, especially small children, when carrying out any maintenance and repairs or making adjustments.

## HYDRAULIC SAFETY

1. Make sure that all components in the hydraulic system are kept in good condition and are clean.
2. Replace any worn, cut, abraded, flattened, or crimped hoses and metal lines.
3. Do not attempt any makeshift repairs to the hydraulic lines, fittings, or hoses by using tape clamps, or cements. The hydraulic system operates under extremely high pressure. Such repairs will fail suddenly and create a hazardous and unsafe condition.

4. Wear proper hand and eye protection when searching for a high-pressure hydraulic leak. Use a piece of wood or cardboard as a backstop instead of hands to isolate and identify a leak.

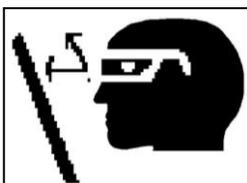

5. If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop from hydraulic fluid piercing the skin surface.
6. Before applying pressure to the system, make sure all components are tight and that lines, hoses, and couplings are not damaged.

## TRANSPORT SAFETY

1. Make sure you are in compliance with all local regulations regarding transporting equipment on public roads and highways.
2. Make sure the SMV (Slow Moving Vehicle) emblem and all the lights and reflectors that are required by the local highway and transport authorities are in place, are clean, and can be seen clearly by all overtaking and oncoming traffic.
3. Do not allow anyone to ride on the Speed Clean or vehicle during transport.
4. Do not exceed 32 km/h (20 mph). Reduce speed on rough roads and surfaces.
5. Make sure safety chains are attached and secure to towing vehicle while in transport.

### **Storage Safety**

1. Store away from areas of human activity. Do not permit children to play on or around the stored machine.
2. Make sure the unit is sitting, or blocked up firm and solid and will not tip or sink into a soft area.
3. Cover with weather - proof tarpaulin and tie down securely.

### **Tire Safety**

1. Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion, which may result in serious injury or death.
2. Do not attempt to mount a tire unless you have the proper equipment and experience to do the job.
3. Have a qualified tire dealer or repair service perform required tire maintenance.

### **Assembly Safety**

1. Assemble in an area with sufficient space to handle the largest component and access to all sides of machine.
2. Use only lifts, cranes, jacks, and tools, with sufficient capacity for the load.
3. Use two people to handle the large bulky components.
4. Do not allow spectators in the working area.

### **Safety Decals**


1. Keep safety decals and signs clean and legible at all times.
2. Replace safety decals and signs that are missing or have become illegible.
3. Replaced parts that displayed a safety sign should also display the current sign.
4. Safety decals or signs are available from your Dealer Parts Department.

### **How to Install Safety Decals**

1. Be sure that the installation area is clean and dry
2. Decide on the exact position before you remove the backing paper.
3. Remove the smallest portion of the split backing paper.
4. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
5. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
6. Small air pockets can be pierced with a pin and smoothed out using the piece of decal backing paper.




### 3 SAFETY DECAL LOCATIONS

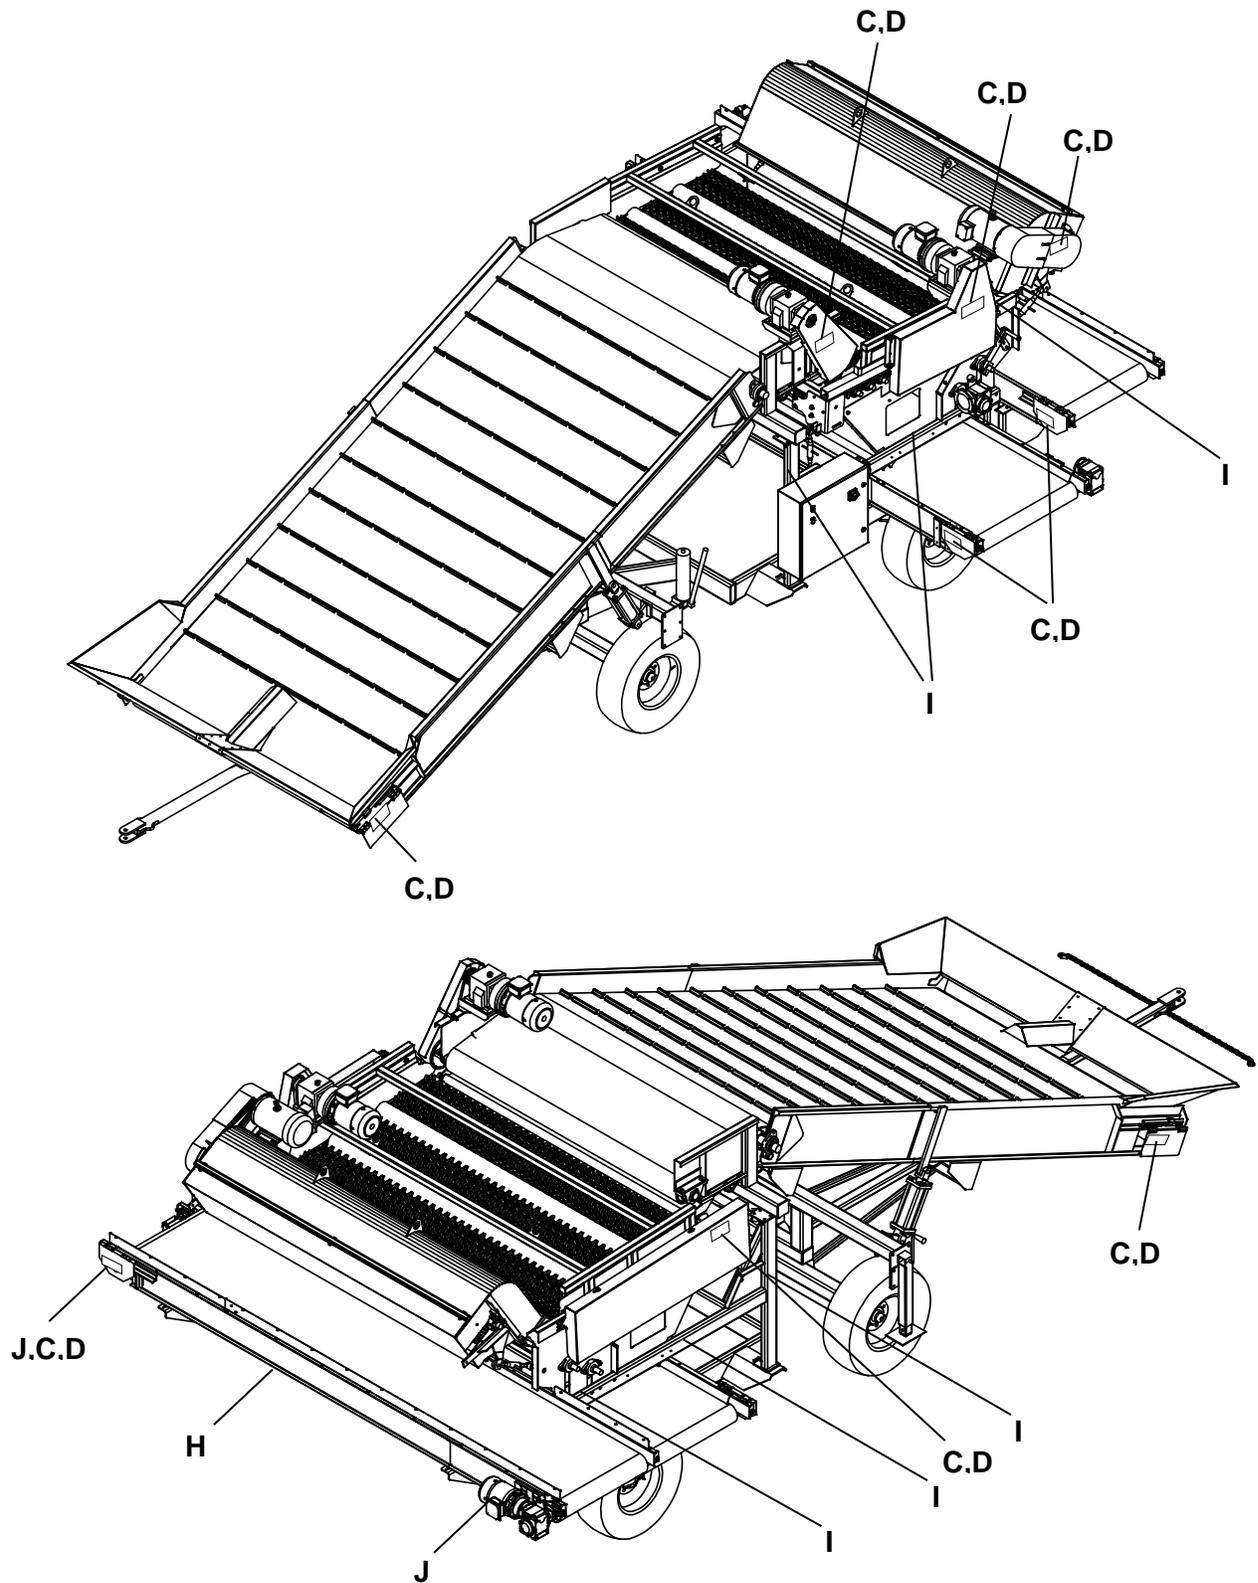

# SAFETY DECAL LOCATIONS

The types of decals and locations on the equipment are shown in the illustration below. Good safety requires that you familiarize yourself with the various Safety Decals, the type of warning and the area, or particular function related to that area, that requires your SAFETY.

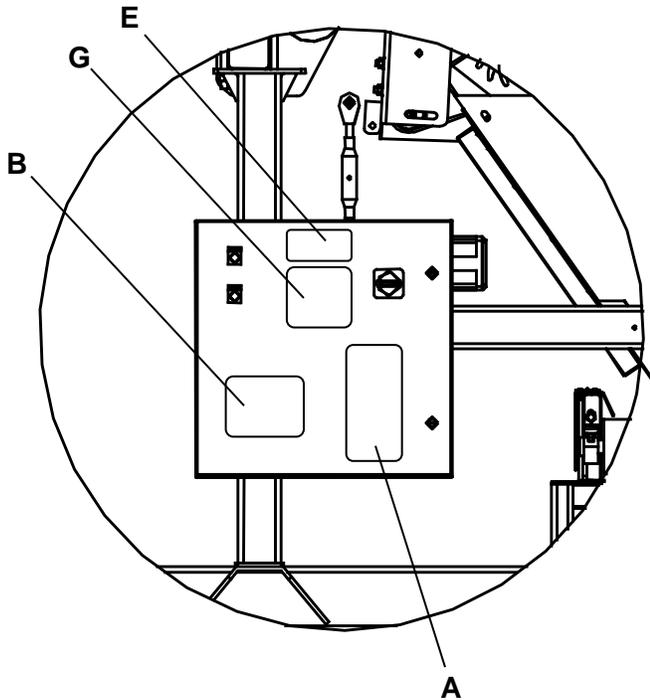

A

**⚠ WARNING**

- Read and understand the Operator's Manual before operating, maintaining, adjusting or repairing. Review safety instructions annually.
- Stop machine, lock-out tag-out power source, disconnect power lines, and wait for all moving parts to stop before servicing, adjusting, maintaining, repairing or cleaning.
- If removed for servicing, install and properly secure all guards and shields before operating.
- Keep hands, feet, hair and clothing away from all moving parts.
- Clear the area of bystanders, especially small children, before starting.
- Using the jacks, raise the machine until the weight is off the tires; then level the frame. If the machine's weight remains on the tires, the tires must be chocked to prevent movement.
- Have a certified electrician provide electrical power to the machine.
- Lock-out tag-out power source, disconnect power lines or shut off power source before opening panel or working on electrical components. High voltage can cause electrocution.
- Do not stand between the hopper and any vehicle backing up to the hopper. Keep others away.
- Keep the working area clean and dry.

93040

B

**⚠ DANGER**

ELECTROCUTION HAZARD

To Prevent serious injury or death from electrocution:

1. Disconnect power lines before opening panel or working on any electrical components.
2. Keep electrical components in good repair.
3. Allow only certified electricians to work on electrical components.

93041

**REMEMBER**– If Safety Decals have been damaged, removed, become illegible or parts replaced without decals, new decals must be applied. New decals are available from your authorized dealer.

C




D



F




E

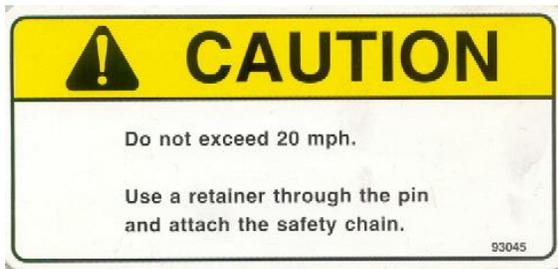

G



H

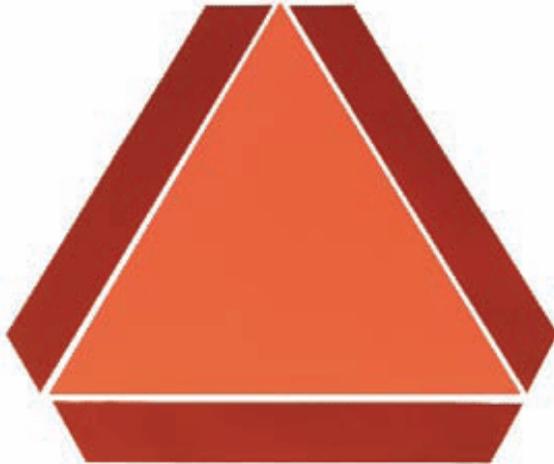

I – Amber Reflector

J – Red Reflector

**REMEMBER**– If Safety Decals have been damaged, removed, become illegible or parts replaced without decals, new decals must be applied. New decals are available from your authorized dealer

## 4 OPERATION



1. Read and understand the Operator's Manual and all safety signs before operating, servicing, adjusting, repairing, or unplugging.
2. Do not allow riders.
3. Install and secure all guards and shields before starting or operating.
4. Keep hands, feet, hair, and clothing away from moving parts.
5. Stop Speed Clean and disconnect power supply, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
6. Have a certified electrician provide power to the machine and service electrical components
7. Do not operate when any guards are damaged or removed.
8. Clear the area of bystanders, especially small children, before starting.
9. Keep all hydraulic lines, fittings, and couplers tight and free of leaks before using.
10. Clean Reflectors, Slow Moving Vehicle, and lights before transporting.
11. Add extra lights and use pilot vehicle when transporting during times of limited visibility.
12. Use hazard flashers on vehicle when transporting.
13. Install safety chain when attaching to towing vehicle.
14. Follow chemical manufacturers' handling and safety instructions exactly when using chemicals with machine.
15. Review safety instructions with all operators annually.

### TO THE NEW OPERATOR OR OWNER

Harriston Speed Cleans are designed to quickly and efficiently separate dirt & debris from potatoes.

**It is the responsibility of the owner or operator to read this manual and to train all other operators before they start working with the machine. Follow all safety instructions exactly. Safety is everyone's business. By following recommended procedures, a safe working environment is provided for the operator, bystanders and the area around the worksite. Untrained operators are not qualified to operate the machine.**

Many features incorporated into this machine are the result of suggestions made by customers like you. Read this manual carefully to learn how to operate the machine safely and how to set it to provide maximum efficiency. By following the operating instructions in conjunction with a good. Maintenance program, your Speed Clean will provide many years of trouble-free service.

## PRINCIPLE COMPONENTS

The Speed Clean uses the cleaning 'stars' to separate loose dirt and debris from potatoes.


The produce from the field is loaded into the input conveyor and is moved across the cleaning stars where dirt is removed. The produce then passes the blower which presses the vines and produce against the reverse direction bristle belt. The vines get grabbed by the bristle belt and are dropped on to the dirt discharge conveyor. The clean potatoes land on the rear potato discharge conveyor.

Conveyors generally move the produce to the right side of the machine and the foreign material to the left side.

Electric motors drive the machine.

The panel on the left side houses the electric controls, including the speed control for the bristle belt, and any optional conveyor reversing switches.

Fig. 1 Principle Components.

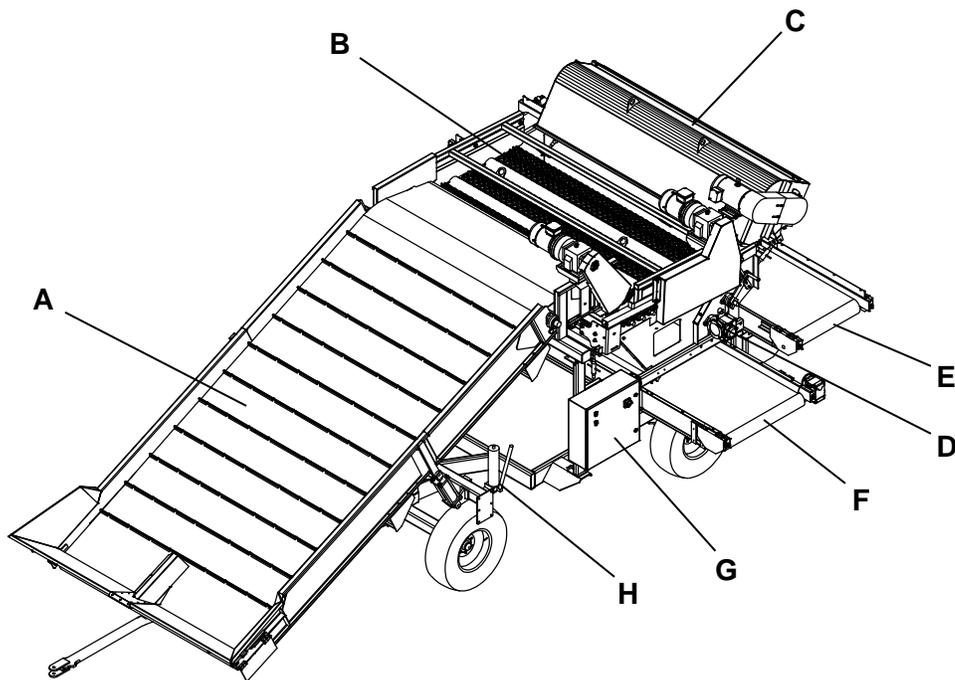

- A Elevator Loading Conveyor**
- B Dirt Cleaning Table**
- C Blower**
- D Bristle Belt**
- E Potato Discharge Conveyor**
- F Trash Discharge Conveyor**
- G Electrical Control Panel**
- H Hydraulic Hand Pump**

## MACHINE BREAK-IN

Although there are no operational restrictions on the Speed Clean when used for the first time, it is recommended that the following mechanical items be checked:

### A. After operating for ½ hour.

Re-torque all the wheel bolts.

Re-torque all other fasteners and hardware.

Check the alignment and tension of each conveyor. Align and tighten as required.

Check that no electric cables are pinched, rubbing or being crimped. Re-route as required.

Check the oil level in the gearboxes if there are any oil leaks.

### B. After operating for 5 hours and 10 hours:

1. Re-torque all wheel bolts, fasteners and hardware.

Check electrical cable routing.

Check the tension and alignment of each conveyor.

Check all gearboxes for leaks.

Then go to the normal servicing and maintenance schedule as defined in the Maintenance Section.

## PRE-OPERATION CHECKLIST

Efficient and safe operation of the Harriston Speed Clean requires that each operator reads and understands the operating procedures and all related safety pre-operation checklist is provided for the operator. It is important for both the personal safety and maintaining the good mechanical condition of the Speed Clean that this checklist is followed.

Before operating the machine and each time thereafter, the following areas should be checked off:

1. Service the machine per the schedule outlined in the Service and Maintenance Section.

Be sure a certified electrician has provided power for the machine.

Check that the machine is level and supported on the frame jacks.

Clean the working area. Remove all debris and produce to prevent tripping or slipping.

Check the oil level in the gearboxes if there are any oil leaks.

Inspect all electrical cables and power lines. Re-route any that are contacting moving parts. Repair any that are damaged.

Check for and remove entangled material.


Close and secure guards.

## CONTROLS

Review these sections carefully to familiarize yourself with the function and movement of each control before starting.

### 1. Master ON/OFF Switch

The Main Power Switch on the electrical panel must be turned to the "ON" position for other controls to function.

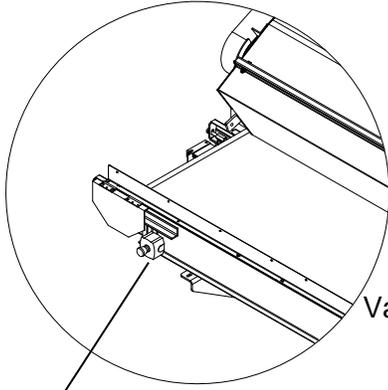

Emergency Stop Button

### EMERGENCY STOP BUTTON

Push to stop entire machine.  
Turn clockwise to reset switch.  
Located on potato discharge conveyor

### 2. Input Conveyor Elevator)Height:

A standard hand hydraulic pump jack is used to set the height of the elevator. Close the relief valve and pump the handle to raise the elevator.

Open the relief valve lever to release pressure in pump to lower elevator.


#### IMPORTANT

Remove the conveyor lock rod before changing the height of the conveyor.

Start Button

Stop Button

Master Power Switch

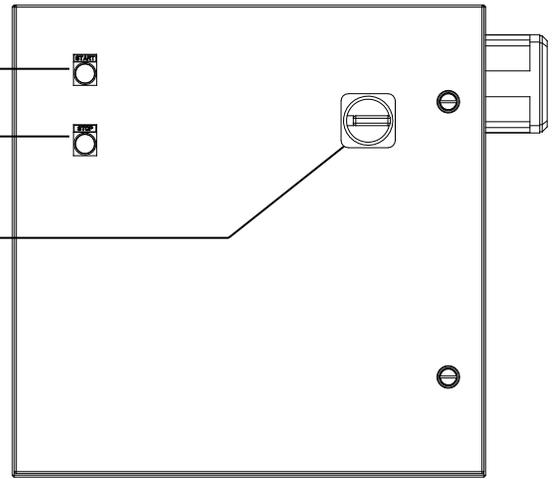


Transformer

Fuse


Variable Frequency Drive (VFD)

Starters

Heaters

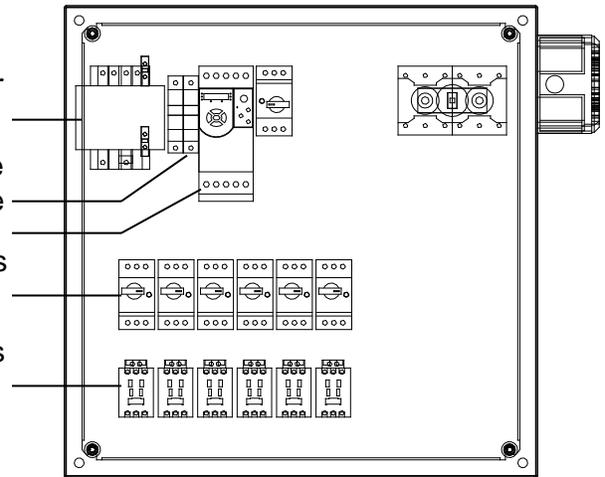

Electrical Control Panel

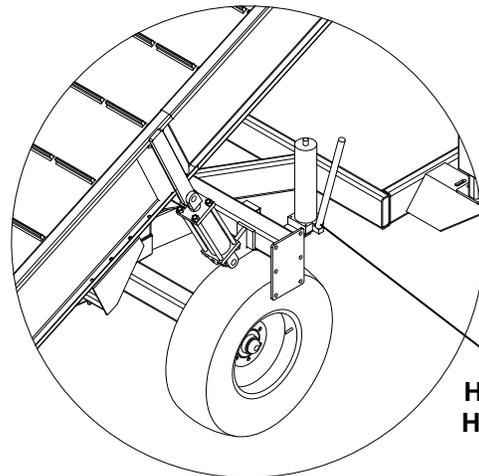


HYDRAULIC HAND PUMP

## ATTACHING/UNHOOKING

The Speed Clean should always be parked on a level, dry area that is free of debris and foreign objects. Follow this procedure when attaching.

1. Clear the area of bystanders and remove foreign objects from the machine and working area.
2. Make sure there is enough room to back the towing vehicle up to the tongue.
3. Disconnect and remove the power lines.
4. Set the input conveyor at the required height and install the transport cylinder lock with its retainers.
5. If transporting on a public road, install the optional lighting bar. Secure the harness along the frame and tongue.
6. Lower the machine onto the tires. Rotate and lock the jacks into transport position.
7. Start the towing vehicle and slowly back it up to the tongue.
8. Stop the engine, place all controls in neutral, set park brake and remove ignition key before leaving cab.
9. Install a drawbar pin with provisions for a mechanical retainer such as a click pin. Install the retainer.
10. Attach the safety chain between the towing vehicle and the tongue.
11. Connect the wiring harness.
12. Reverse the above procedure when unhooking.


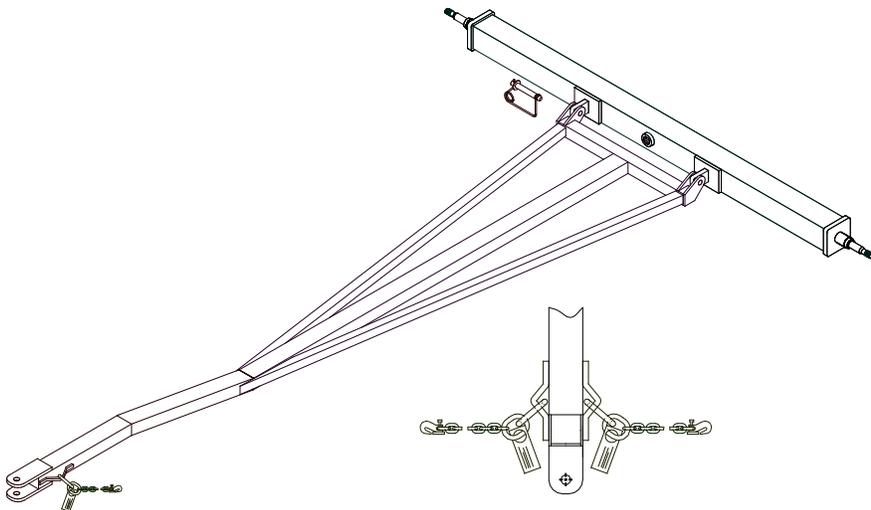


## TOW HITCH & SAFETY CHAINS

## MACHINE PLACEMENT

Before the Speed Clean can be used it must be set up and prepared for operation. When placing, follow this procedure:

1. Clear the area of bystanders, especially small children.
2. Be sure you select a spot that has sufficient space to locate the machine, enough clearance to allow trucks to back up to unload and space for the produce and debris removal conveyors.
3. Locate the machine at the desired position.
4. Level the machine. Use the jacks to level the frame. Place blocks or planks under the base of the jack if required.
5. Remove the transport cylinder lock and place in its stowed position. Set the hopper at its desired height.
6. Move the input and removal conveyors into position.

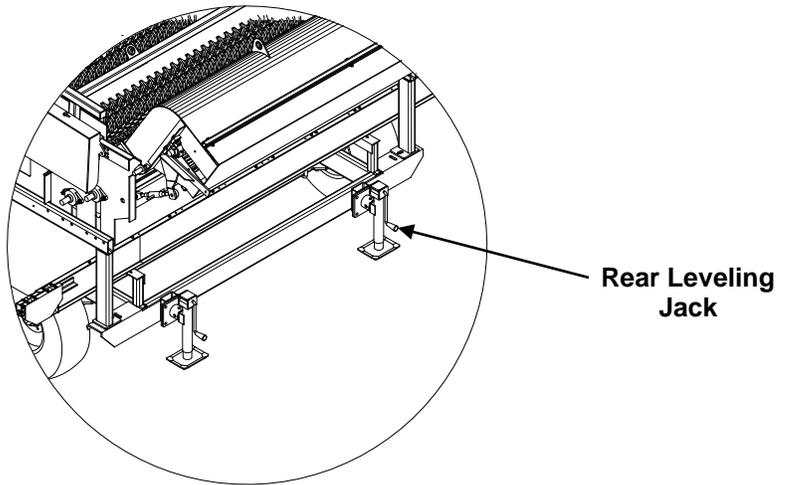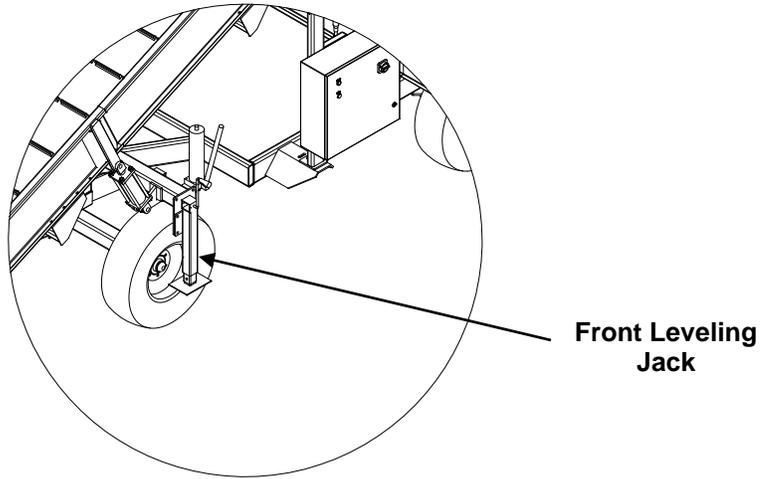


## IMPORTANT

It is recommended that a conveyor be used to move the produce from the field transport trucks into the input hopper. This also acts to distribute the flow of material evenly across the width of the machine to give you maximum capacity.

Have a certified electrician provide power to the machine. Protect the power lines to prevent damage.

Keep the working area dry and clean to prevent slipping or tripping.

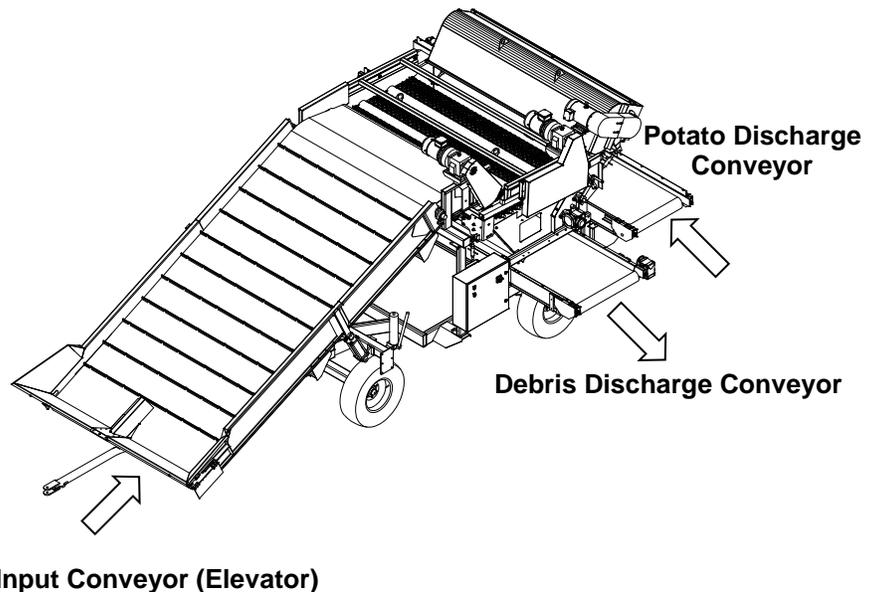


## OPERATING

When operating the Speed Clean, follow this procedure:


1. Clear the area of bystanders, especially small children, before starting.
2. Review and follow the Pre-Operation Check list.
3. Be sure the machine is correctly positioned and set-up .The trucks should have ample space and clearance to back up and unload.
4. The conveyors removing the produce and debris along with the receivers should be in place.
5. Position the truck to unload.

## UNLOADING

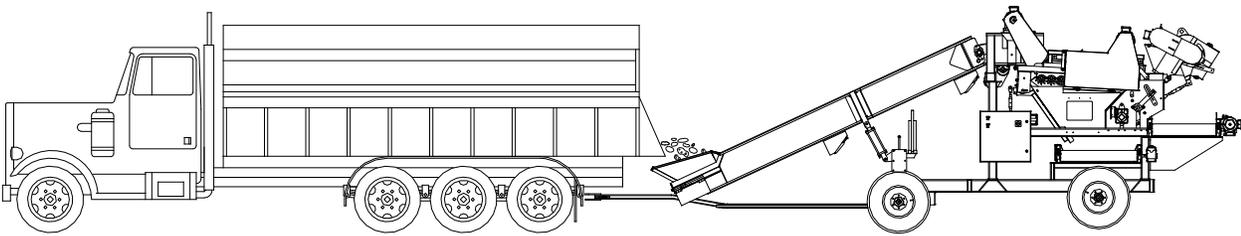

### Starting machine:

- a. Start the conveyors that remove the machine output.
- b. Use the master switch on the control box to turn the machine on.
- c. Push the "Start" button.
- d. Unload the truck (Refer to truck manual for details).

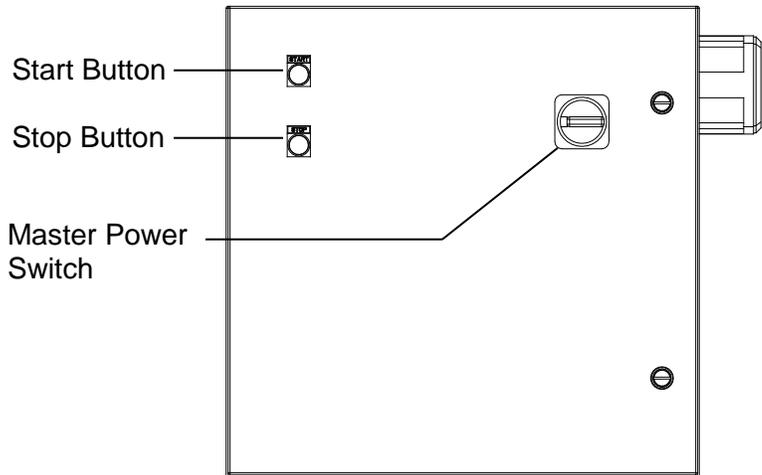

## STOPPING MACHINE

- a. Stop the unloading of the truck.
- b. Stop the conveyor into the hopper.
- c. Stop the machine using the "Stop" button.
- d. Stop the conveyors removing material from the machine.

### NOTE


It is best if the machine and conveyors are empty before stopping the machine and cleaning system.

### MAXIMUM CAPACITY:

To obtain maximum capacity, the operating conditions should exist:


- a. Feed the machine with a single layer of material. This will allow each piece of produce/debris to contact the star rollers and be cleaned.

Feed single layer of produce on Dirt Table and Blower for best results

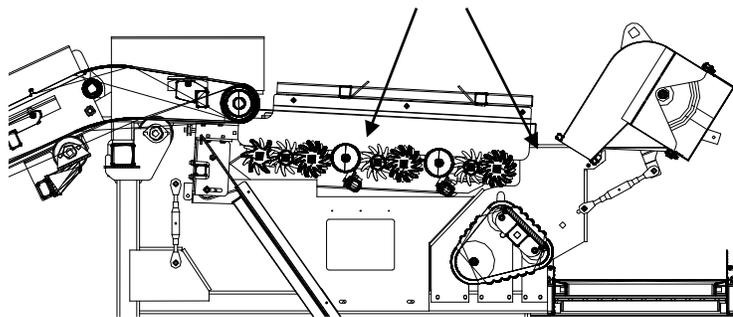

### SINGLE LAYER FEEDING

- b. Distribute the flow of material evenly across the width of the machine and keep it full. Use the divider in hopper to spread the flow of material.

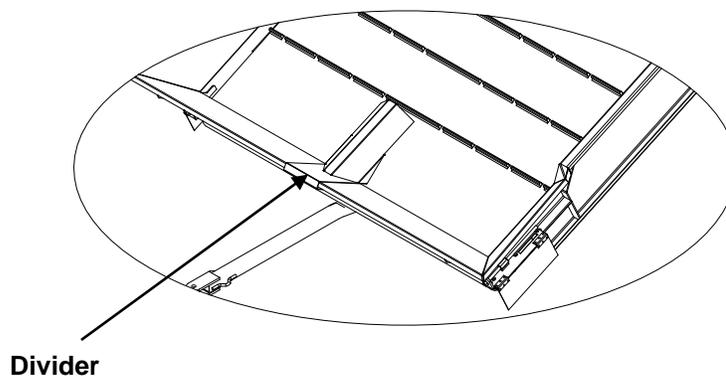

**Machine settings:**

The machine is designed to remove loose dirt, vines, and other debris from potatoes. Depending on potato varieties, soil types, and amount of moisture the machine will need to be set up differently. Use the following adjustments to ensure the best possible cleaning.

**Dirt Table Adjustment:**

- a. **Table Slope:** Using the turn-buckle, adjust the table so that the front of the table is approximately 2" higher than the rear of the table. Raising the front higher will decrease the amount of cleaning time for the produce. Lowering the front will increase the cleaning time of the produce and slow the flow through the machines.
- b. **Roller Spacing:** Using the adjusting rod located on the end of both side rails will increase or decrease the gap between rollers. This gap will need to be adjusted so that good produce will not fall between the rollers.




**Note:**

**Stop machine before adjusting roller spacing.  
Adjust both sides evenly!**

- c. **Scraper Tension:** If the Speed Clean is equipped with an SS table, there are scrapers to remove excess mud build up from the steel rollers. Increase tension to remove more mud. Keeping spring pressure to a minimum will increase scraper and roller life.

**Blower and Bristle Belt Adjustment:**

- a. **Blower Angle Adjustment:** Set the blower at a 45 degree angle for best vine and debris cleaning. If produce is being carried over the bristle belt, point the blower down more to decrease pressure against the bristle belt.
- b. **Bristle Belt Adjustment:** The bristle belt angle can be adjusted to increase or decrease the amount of contact the belt and the produce will have.

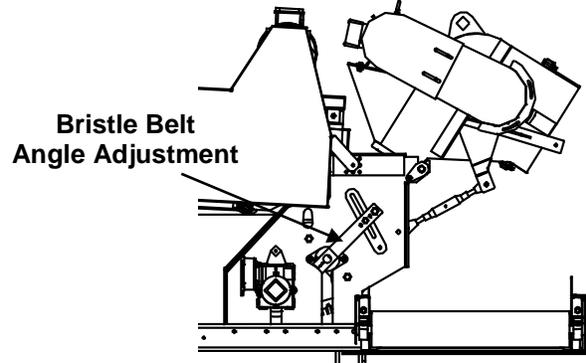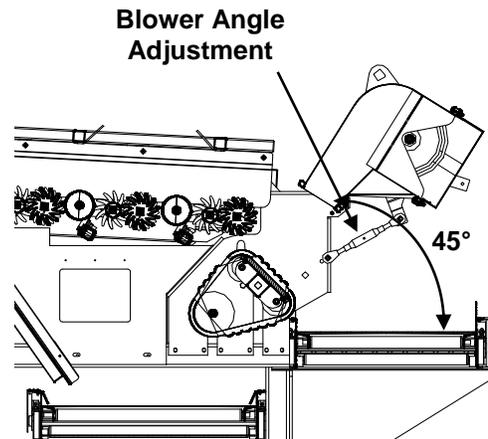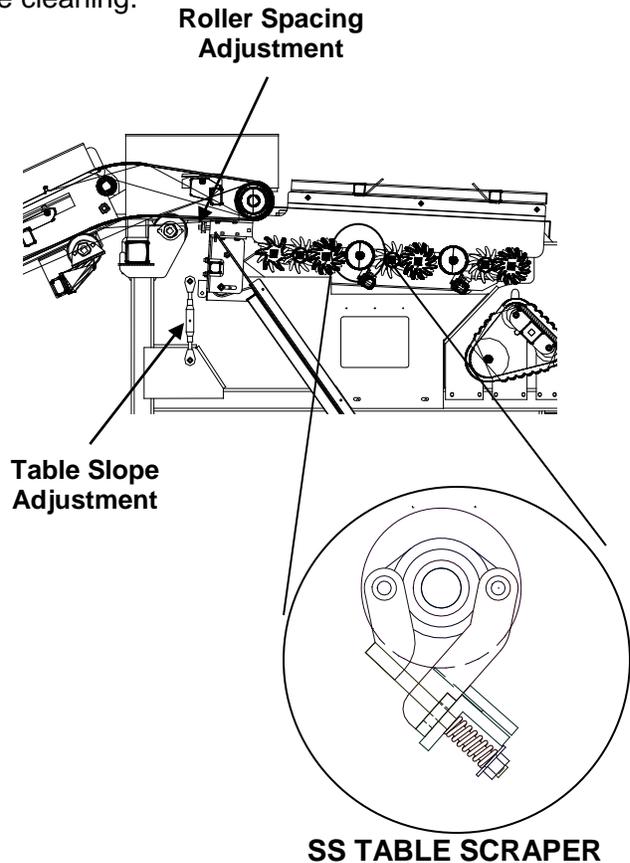

### Operating hints:

- a. Provide a steady flow of material through the machine at all times. Adjacent produce acts as a cushion and reduces bruising.
- b. Distribute the flow of material evenly across the width of the machine to obtain maximum capacity. Use the divider in the hopper to distribute the flow.
- c. Use conveyors to load material into the hopper and to remove produce and trash at the outputs.
- d. Keep the working area clean and dry to prevent tripping or slipping.
- e. Keep scrapers on tables properly adjusted and clear of debris. Clean when necessary.



## WARNING

Stop machine, disconnect power lines, and wait for all moving parts to stop before attempting to clean or service any part of the machine.

## 5 TRANSPORTING




## TRANSPORT SAFETY

1. Make sure you are in compliance with all local regulations regarding transporting equipment on public roads and highways.
2. Make sure the SMV (Slow Moving Vehicle) emblem and all the lights and reflectors that are required by the local highway and transport authorities are in place.
3. Attach securely to the towing vehicle using a retainer on the pin and the safety chains.
4. Do not allow anyone to ride on the machine during transport.
5. Install and secure input conveyor lock rod before transporting.
6. Do not exceed 20 mph (32 km/h). Reduce speed on rough roads and surfaces.
7. Always use hazard-warning flashers on towing vehicle when transporting unless prohibited by law.
8. Add extra lights or use pilot vehicles when transporting.

The Harriston Speed Clean is designed to be easily and conveniently moved from location to location. When transporting, follow this procedure:

1. Be sure all bystanders are clear of the machine.
2. Be sure that the Speed Clean is hitched positively to the towing vehicle. Always use a retainer in the pin and attach the safety chain between the machine and the towing vehicle.
3. Install the transport lock rod on the input conveyor cylinder. Use retainers.
4. Install and connect the optional lighting package.
5. Keep to the right and yield the right of way to allow faster traffic to pass. Drive on the road shoulder, if permitted by law.
6. Make sure the SMV (Slow Moving Vehicle) emblem and the lights and reflectors that are required by the local highway and transport authorities are in place, are clean and can be seen clearly by all overtaking and oncoming traffic.
7. It is not recommended that the machine be transported faster than 20 mph (32 km/h). Table 1 gives the acceptable transport speed as the ratio of towing vehicle weight to machine weight.
8. Do not allow riders on the machine.
9. During periods of limited visibility, use pilot vehicles and add extra lights to the machine.
10. Always use hazard flashers on the towing vehicle when transporting unless prohibited by law.

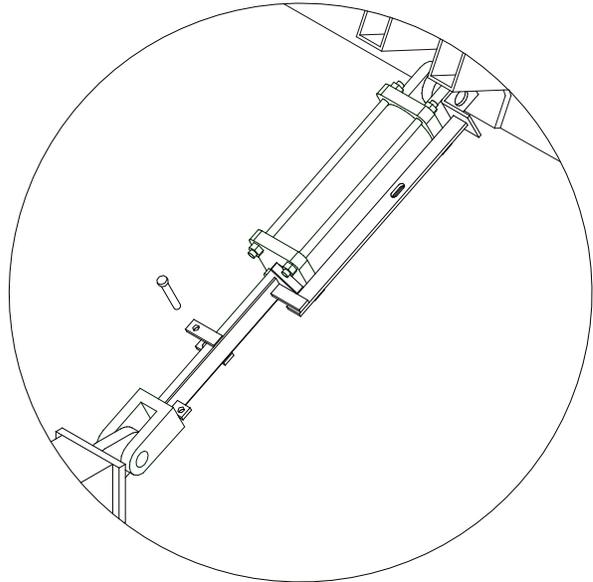

**Speed vs. Weight Ratio**

Road Speed	Weight of fully equipped or loaded implement(s) relative to weight of towing machine
Up to 32 km/h (20 mph)	1 to 1 or less
Up to 16 km/h (10 mph)	2 to 1, or less
Do not tow	More than 2 to 1



## STORAGE SAFETY

1. Store the unit in an area away from human activity.
2. Do not permit children to play on or around the stored machine.
3. Store the unit in a dry, level area. Support the base with planks if required.

At the end of the season, the machine should be thoroughly inspected and prepared for storage. Repair or replace any worn or damaged components to prevent any unnecessary down time at the start of next season. Follow this procedure:

1. Wash the entire machine thoroughly using a pressure washer to remove all dirt, mud, debris or residue.
2. Apply a light coating of oil to each roller chain to prevent rusting.
3. Lubricate all grease points.
4. Inspect all electrical lines. Repair or replace any damaged cable.
5. Check all gearboxes for leaks. Repair if necessary.
6. Run the machine for a couple of minutes to dry it from the washing and to distribute the oil over the roller chain.
7. Disconnect and store the power lines inside.
8. Touch up all paint nicks and scratches to prevent rusting.
9. Move the machine to its storage position.
10. Select an area that is dry, level and free of debris.
11. Unhook the machine from the towing vehicle. Refer to Transporting Section
12. If the machine cannot be stored inside, cover with a waterproof tarpaulin and tie securely in place.
13. Store out of the way of human activity.
14. Do not allow children to play around unit.

## 6 SERVICE AND MAINTENANCE



### MAINTENANCE SAFETY

1. Follow ALL the operating, maintenance and safety information in the manual.
2. Support the machine with blocks or safety stands when changing tires or working beneath it.
3. Follow good shop practices:
  - Keep service area clean and dry. Be sure electrical outlets and tools are properly grounded.
  - Use adequate light for the job at hand.
4. Use only tools, jacks and hoists of sufficient capacity for the job.
5. Stop machine, disconnect power lines and wait for all moving parts to stop before servicing, adjusting, repairing or unplugging.
6. Make sure all guards are in place and properly secured when maintenance work is completed.
7. Keep hands, feet, hair and clothing away from all moving and/or rotating parts.
8. Clear the area of bystanders, especially small children, when carrying out any adjustments.

## SERVICE FLUIDS AND LUBRICANTS

1. Grease  
Use SAE multi-purpose high temperature grease with extreme pressure (EP) performance. Also acceptable is SAE multi-purpose lithium based grease.
2. Gearbox Oil  
Refer to EPT manual
3. Storing Lubricants  
Your machine can operate at top efficiency only if clean lubricants are used. Use clean containers to handle all lubricants. Store them in an area protected from dust, moisture and other contaminants.

## GREASING


Refer to Section Fluids and Lubricants for recommended grease. Use the Maintenance Checklist provided to keep a record of all scheduled maintenance.

1. Use a hand-held grease gun for all greasing.
2. Wipe grease fitting with a clean cloth before greasing, to avoid injecting dirt and grit.
3. Replace and repair broken fittings immediately.
4. If fittings will not take grease, remove and clean thoroughly. Also clean lubricant passageway. Replace fitting if necessary.

## SERVICING INTERVALS


### Monthly

1. Lubricate the front swivel castor base and pivot bushings. (5 locations).

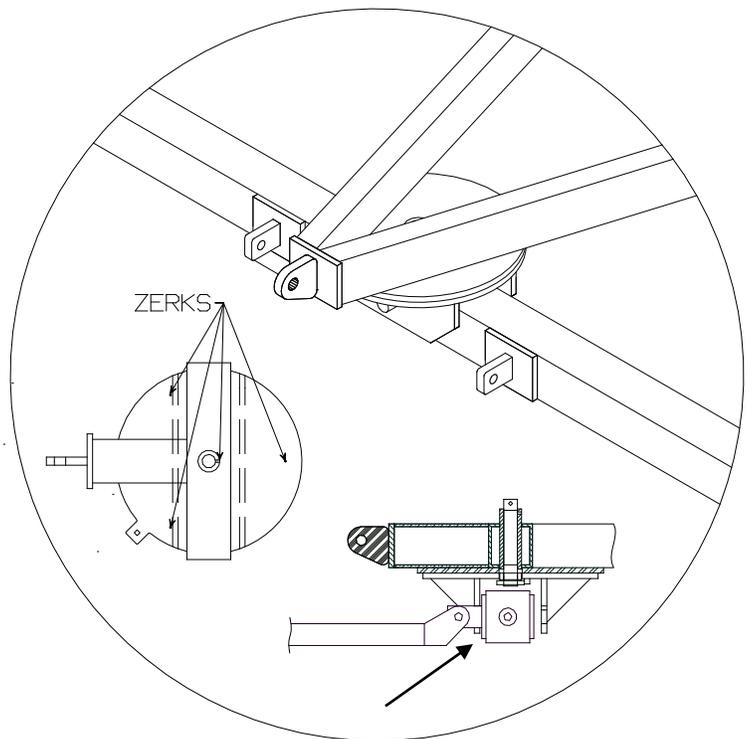

FRONT SWIVEL GREASE POINTS

2. Check the tension and alignment of the conveyors.

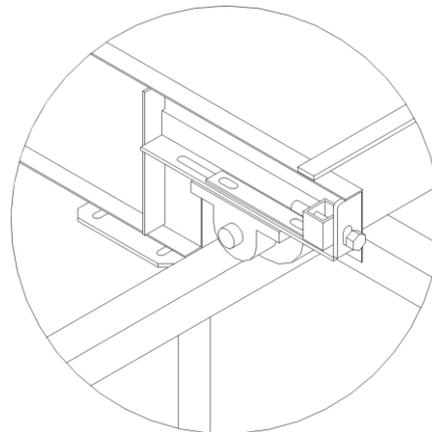


CONVEYOR TIGHTENER (TYPICAL)

3. Check the tension and alignment of the dirt table roller chains and sprockets.

4. Check the oil level in the gearboxes (2 locations). Add as required.
  - a. Replace every 10,000 hours or 2 years

**Annually or 500 Hours**

1. Wash machine.
2. Apply a light coat of oil to roller chain before storage.

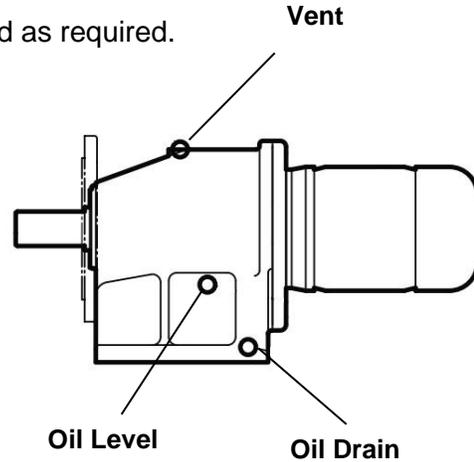

**SERVICE RECORD**

See Lubrication and Maintenance sections for details of service. Copy this page to continue record.

ACTION CODE                      CHECK    ✓                      CL CLEAN  
    LUBRICATE L                      C CHANGE

MAINTENANCE	HOURS SERVICED BY												
<b>MONTHLY</b>													
L Front Wheel Shafts (2)													
✓ Tens. & Align. Of Conveyor													
✓ Tens. & Align. Roller Chains													
✓ Tens. & Align. Sprockets													
✓ Oil Level in Gearboxes													
<b>ANNUALLY OR 500 HOURS</b>													
CL Machine													
L Roller Chain Before Storage													

## MAINTENANCE

By following a careful service and maintenance program for your machine, you will enjoy many years of trouble-free service


### CONVEYOR TENSION AND ALIGNMENT

Material is moved through the machine on belt conveyors. To obtain efficient transmission of material and good life, the belts must be properly tensioned and the rollers and sprockets aligned.

Belts that are too tight will stretch and wear quickly or overload the bearings. Belts that are too loose will catch on the frame and wear quickly. Drive rollers that are not aligned will result in rapid belt wear.

#### Adjusting Tension:

- a. Loosen the jam nuts on the adjusting bolts.
- b. Turn the adjusting bolts to set the tension. Turn bolts on both ends the same amount to maintain roller alignment.
- c. Check the tension again. Over tightening will cause belt stretching and overload the bearing. Belts that are too loose will slip, snag and wear rapidly.
- d. Tighten jam nuts.

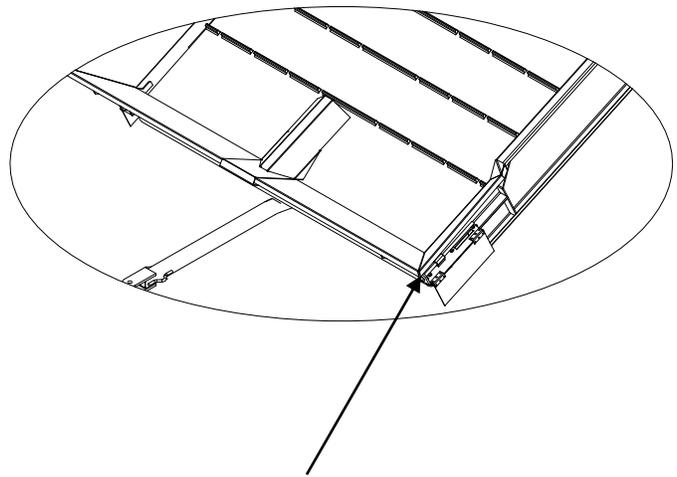


**Elevator Belt Adjustment**

#### Roller alignment:

- a. Lay a square between the frame over the roller. The roller must be at right angles to the frame for the conveyor to track properly.
- b. Use the adjusting bolts on the ends to align the roller. Tighten jam nuts when alignment has been completed.
- c. Set the belt tension.

**Be sure all guards are installed and secure before resuming work.**

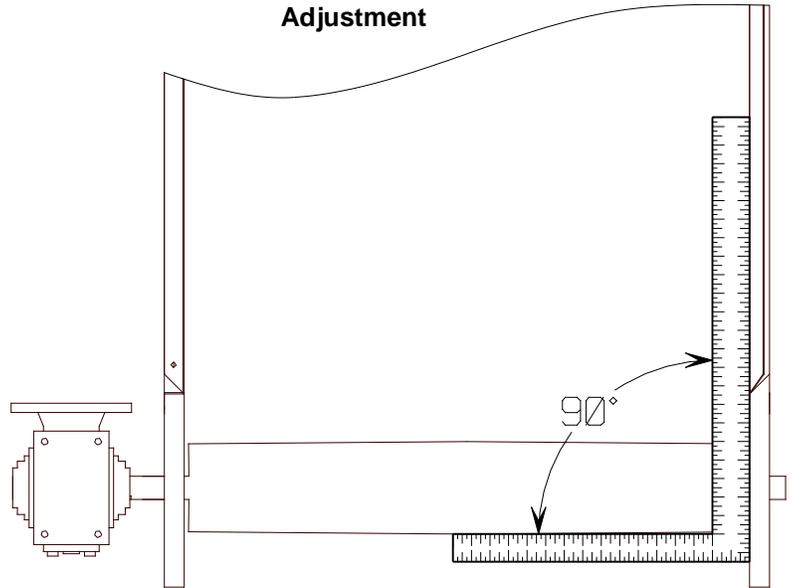

**ROLLER (TYPICAL)**

## DODGE GEAR REDUCER MAINTENANCE

### GEARBOX OIL CHANGING AND BREATHER CLEANING

When maintaining the gearboxes, follow this procedure:

1. Clear the area of bystanders, especially small children.
2. Stop machine, disconnect power lines and wait for all parts to stop moving.

#### Checking Oil Level:

3. Remove the level plug in the gearbox

**IMPORTANT: Check the level only when the oil is cold and the machine is level.**

4. Oil in the reservoir should just fill the threads of the level plughole.
5. Add oil if low or allow the reservoir to drain if overfilled.
6. Install and tighten level plug

### IMPORTANT

It is necessary to maintain the recommended oil level in the gearbox. A low level causes heating from lack of lubrication and rapid gear and bearing wear. Too much oil causes heating from oil churning and can cause seal and breather leaks.

#### 1. Changing Oil:

- a. Place a collection pan or pail under the drain plug.
- b. Remove the drain plug.

- c. Dispose of the oil in an approved manner. Do not contaminate the worksite with used oil.
- d. Install and tighten the drain plugs.
- e. Remove fill and level plugs.
- f. Add oil, per EPT manual, to gearbox until the oil is just starting to come out of the level plughole.

### IMPORTANT

Condensation forms and collects inside the reservoirs during machine operation. Changing oil removes this water and prevents it from damaging the gears and bearings.

- g. Install and tighten the level and fill plugs.

#### 2. Cleaning Breathers:

- a. Remove breathers and blow out with an air hose.
- b. If dirt has caked up in the breather, soak in good solvent and then blow out. It may be necessary to use a probe to loosen the dirt.
- c. Install and tighten the breather or replace if necessary

### APPROVED OIL TYPES

**90 WEIGHT OIL AND EP OIL ARE NOT RECOMMENDED.**

For Ambient temperatures –20° F to 50° F use **MOBIL SHC626**, 30° F to 140° F use **MOBIL SHC634** lubricant.

## 7 TROUBLESHOOTING

The Harriston Speed Clean is an efficient machine for removing dirt, vines, and other debris from produce. It is a simple and reliable system that requires minimal maintenance.

In the following section, we have listed many of the problems, causes and solutions to the problems that you may encounter.

If you encounter a problem that is difficult to solve, after having read through this trouble shooting section, please call your local Harriston dealer. Before you call, please have this Operator's Manual and the Serial number from your Speed Clean ready.

<b>PROBLEM</b>	<b>CAUSE</b>	<b>SOLUTION</b>
Machine won't run.	No power.	Move Master Switch on the control panel to the "ON" position.  Connect power lines to the 3 power Input lines.  <b>NOTE</b> The 110 volt household power line must be plugged in. This controls the relays in the circuits.  Call your local certified electrician to Check the circuits.
One motor doesn't run.	Defective relay.	Have an electrician replace relay.
Conveyor belt slipping.	Conveyor too loose.	Tighten conveyor belt.
Conveyor belt running to One side.	Roller not square.	Align roller at right angle to frame.

## 8 UNLOADING AND ASSEMBLY



1. Use jacks, hoists and cranes with sufficient capacity for the heavy components.
2. Use 2 men to lift and direct the heavy components.


The machine is shipped from the factory in a partially disassembled configuration. Follow this procedure when unloading and assembling:

1. Clear the area of bystanders especially small children.
2. Move the truck to the unloading area.
3. Remove all the frame tie downs
4. Remove the tires from their shipping position.
5. Raise the frame and install the tires. Tighten wheel nuts to their specified torque.
6. Pull the machine off the truck and move to the assembly area.
7. Select an area that is large enough to allow easy access from all sides.
8. Use 2 men to handle the heavy components and jacks or hoists with sufficient capacity for the job.
9. Remove the strapped down conveyors, motor supports and hardware.

10. Install and secure the conveyors.

11. Tighten all hardware to its specified torque.


**Assembled**

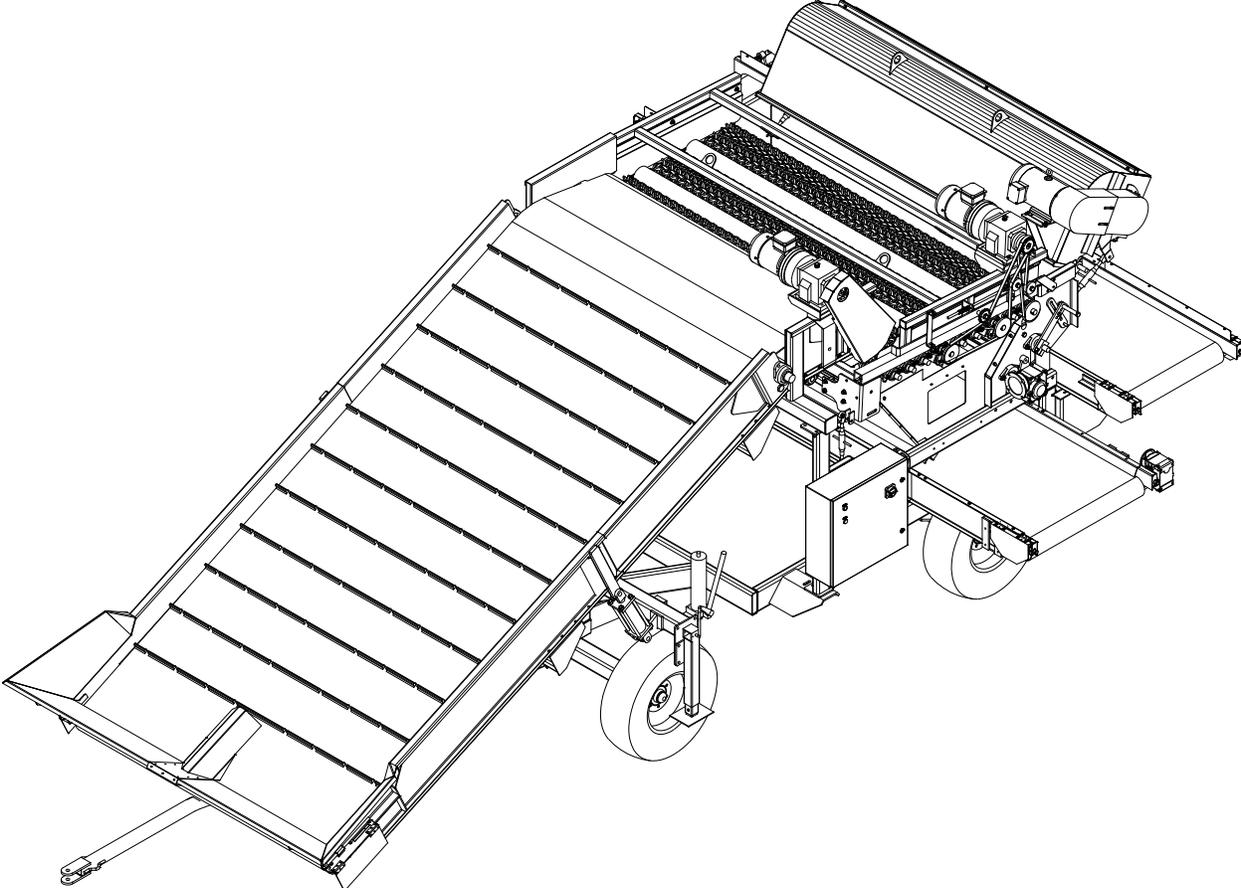


9 SPECIFICATIONS

SPEED CLEAN

TOP VIEW

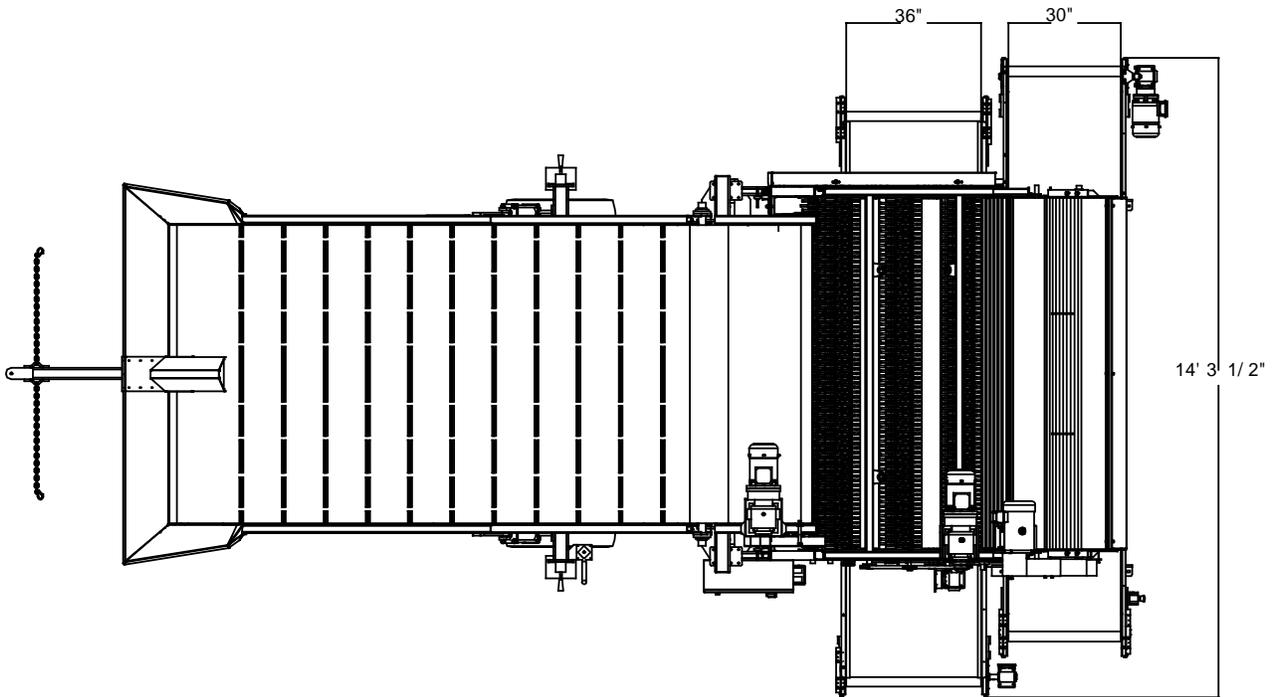

SIDE VIEW

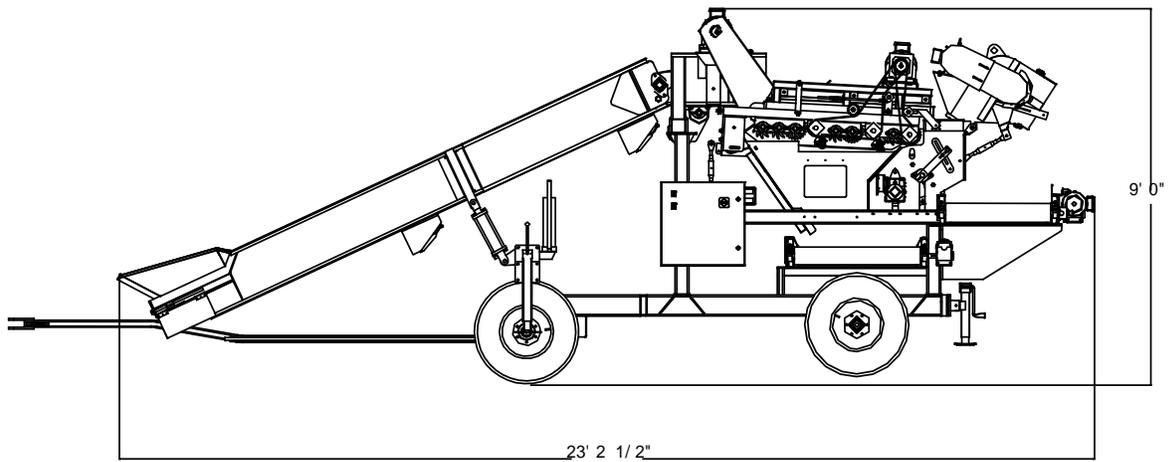

# SPECIFICATIONS

## MECHANICAL

<b>DIMENSIONS</b>	<b>Speed Clean</b>
<b>Electric motors</b>	1-(1-1/2 HP), 2-(2 HP), 2-(3 HP), 1-(5 HP)
<b>Electrical supply</b>	1 ph 240v 87A 3ph 208/240 v 48A 3ph 440v 24A
<b>Feed width</b>	80"
<b>Cleaning width</b>	94"
<b>Transport length</b>	23' 3"
<b>Transport width</b>	14' 4"
<b>Transport height</b>	9'
<b>Shipping width</b>	10'
<b>Weight</b>	~8000 lbs
<b>Capacity</b>	up to 90 T/H
<b>Wheel Base</b>	95"

**\*\*SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE\*\***


## BOLT TORQUE

### CHECKING BOLT TORQUE

The tables shown below give correct torque values for various bolts and capscrews. Tighten all bolts to the torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt.

### ENGLISH TORQUE SPECIFICATIONS

Bolt Diameter	SAE 2		Bolt Torque SAE 5		SAE 8	
	N.m.	(lb – ft)	N.m.	(lb – ft)	N.m.	(lb – ft)
1/4"	8	6	12	9	17	12
5/16"	13	10	25	19	36	27
3/8"	27	20	45	33	63	45
7/16"	41	30	72	53	100	75
1/2"	61	45	110	80	155	115
9/16"	95	70	155	115	220	165
5/8"	128	95	215	160	305	220
3/4"	225	165	390	290	540	400
7/8"	230	170	570	420	880	650
1"	345	225	850	630	1320	970

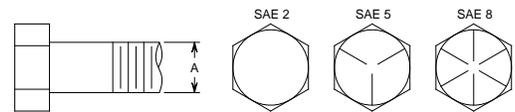

Torque figures indicated above are valid for non-greased or non-oiled threads unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

\* Torque values for bolts and capscrews are identified by their head markings.

# 10 INDEX

<b>A</b>	
Adjusting Tension .....	26
Assembly Safety .....	6
Attaching/Unhooking .....	15
<b>B</b>	
Blower and Bristle Belt Adjustment .....	19
Bolt Torque .....	33
<b>C</b>	
Controls .....	14
Conveyor Tension and Alignment .....	26
<b>D</b>	
Dirt Table Adjustment .....	19
Dodge Gear Reducer Maintenance .....	27
<b>F</b>	
Fluids and Lubricants .....	23
<b>G</b>	
General Safety .....	3
Greasing .....	23
<b>H</b>	
How to Install Safety Decals .....	6
Hydraulic Safety .....	5
<b>I</b>	
Introduction .....	1
<b>M</b>	
Machine Break-In .....	13
Machine Placement .....	16
Machine settings .....	19
Maintenance .....	26
Maintenance Safety .....	4
Mechanical .....	32

<b>O</b>	
Operating .....	17
Operating hints .....	20
Operating Safety .....	4
Operation .....	11
<b>P</b>	
Pre-Operation Checklist .....	13
Principle Components .....	12
<b>R</b>	
Roller alignment .....	26
<b>S</b>	
Safety .....	2
Safety Decal Locations .....	8
Safety Decals .....	6
Serial Number Location .....	5
Service and Maintenance .....	23
Service Record .....	25
Servicing Intervals .....	24
Sign Off Form .....	7
Specifications .....	31, 32
Starting Machine .....	17
Stopping Machine .....	18
Storage Safety .....	6
<b>T</b>	
Tire Safety .....	6
Transport Safety .....	5
Transporting .....	20
Troubleshooting .....	28
<b>U</b>	
Unloading .....	17
Unloading and Assembly .....	29
<b>W</b>	
Warranty .....	3



Box 378, Minto, ND 58261  
(800)437-8205 (701)248-3286  
Fax: (701)248-3070

[www.harriston-mayo.com](http://www.harriston-mayo.com)    [harriston@invisimax.com](mailto:harriston@invisimax.com)

**PRINTED IN USA**  
**ISSUE DATE: November 2016**

**PART NUMBER: 93067**